

FIG. 1


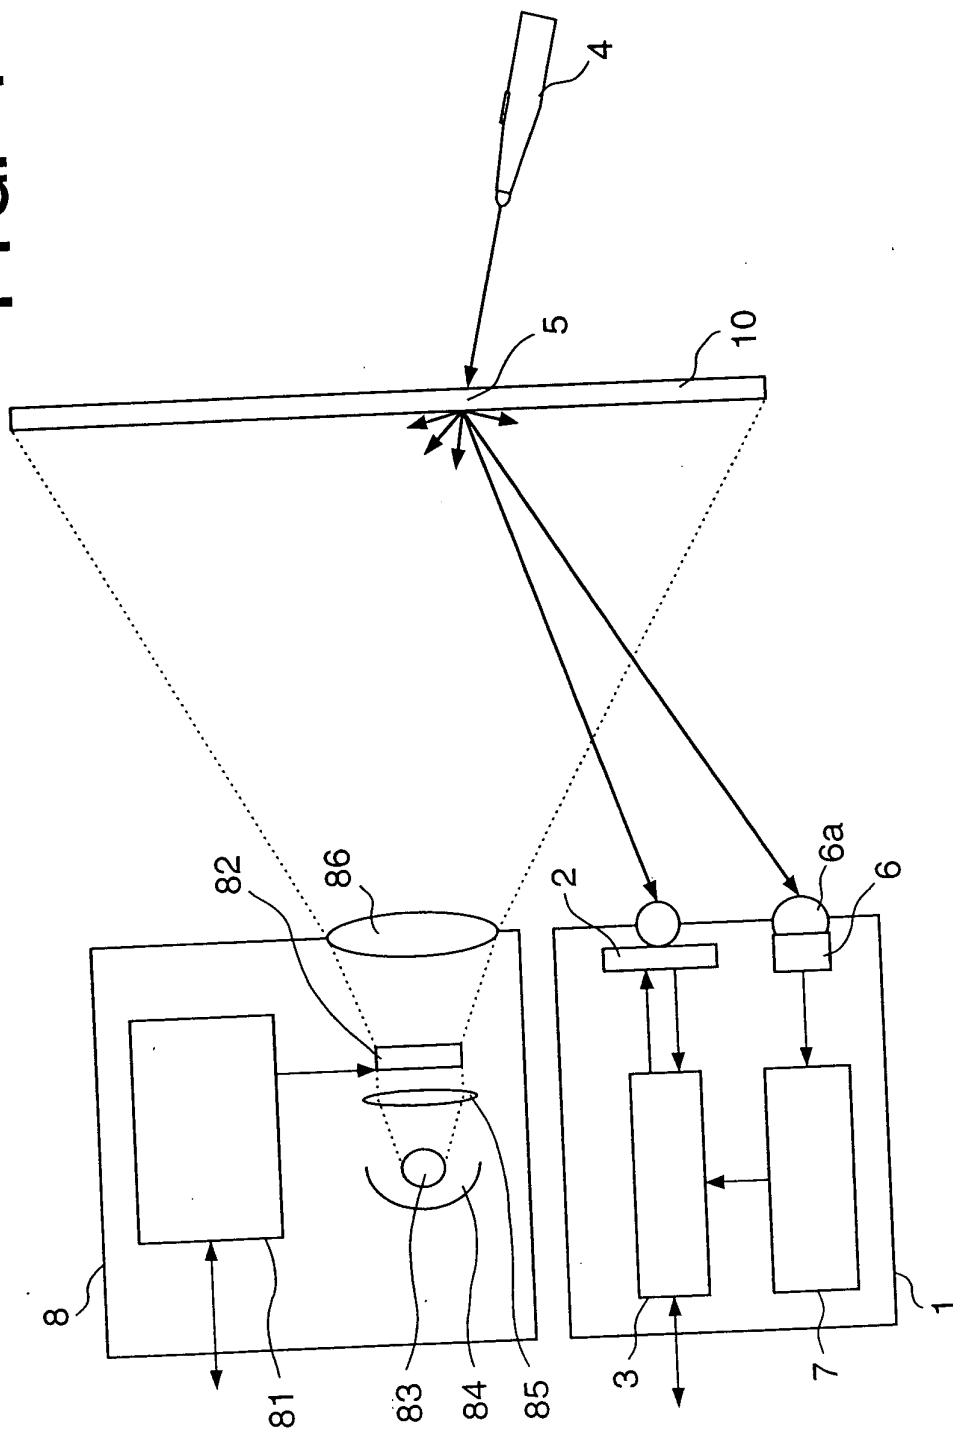


FIG. 2

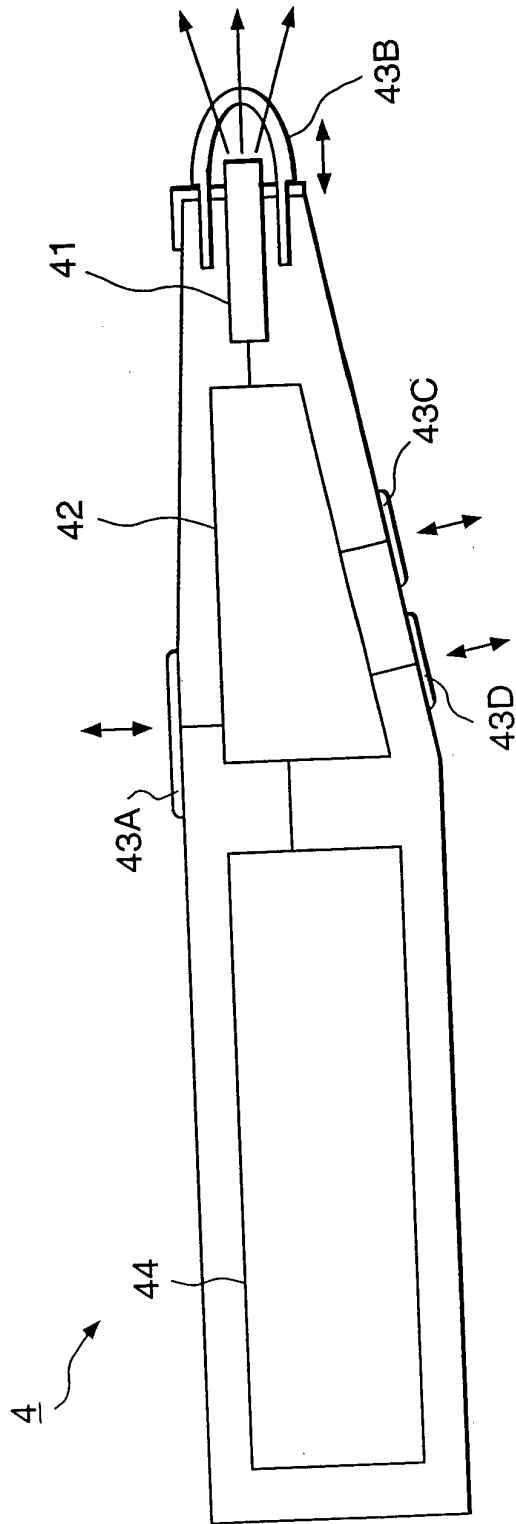


005060" 52255960

3/17

FIG. 3


SWITCH A	SWITCH B	SWITCH C	SWITCH D	LIGHT EMISSION	PEN DOWN	PEN BUTTON
X	X	—	—	OFF	OFF	OFF
○	X	X	X	ON	OFF	OFF
○	X	○	X	ON	ON	OFF
○	X	X	○	ON	OFF	ON
○	X	○	○	ON	ON	ON
○	○	—	—	ON	ON	ON
X	○	—	—	ON	ON	OFF

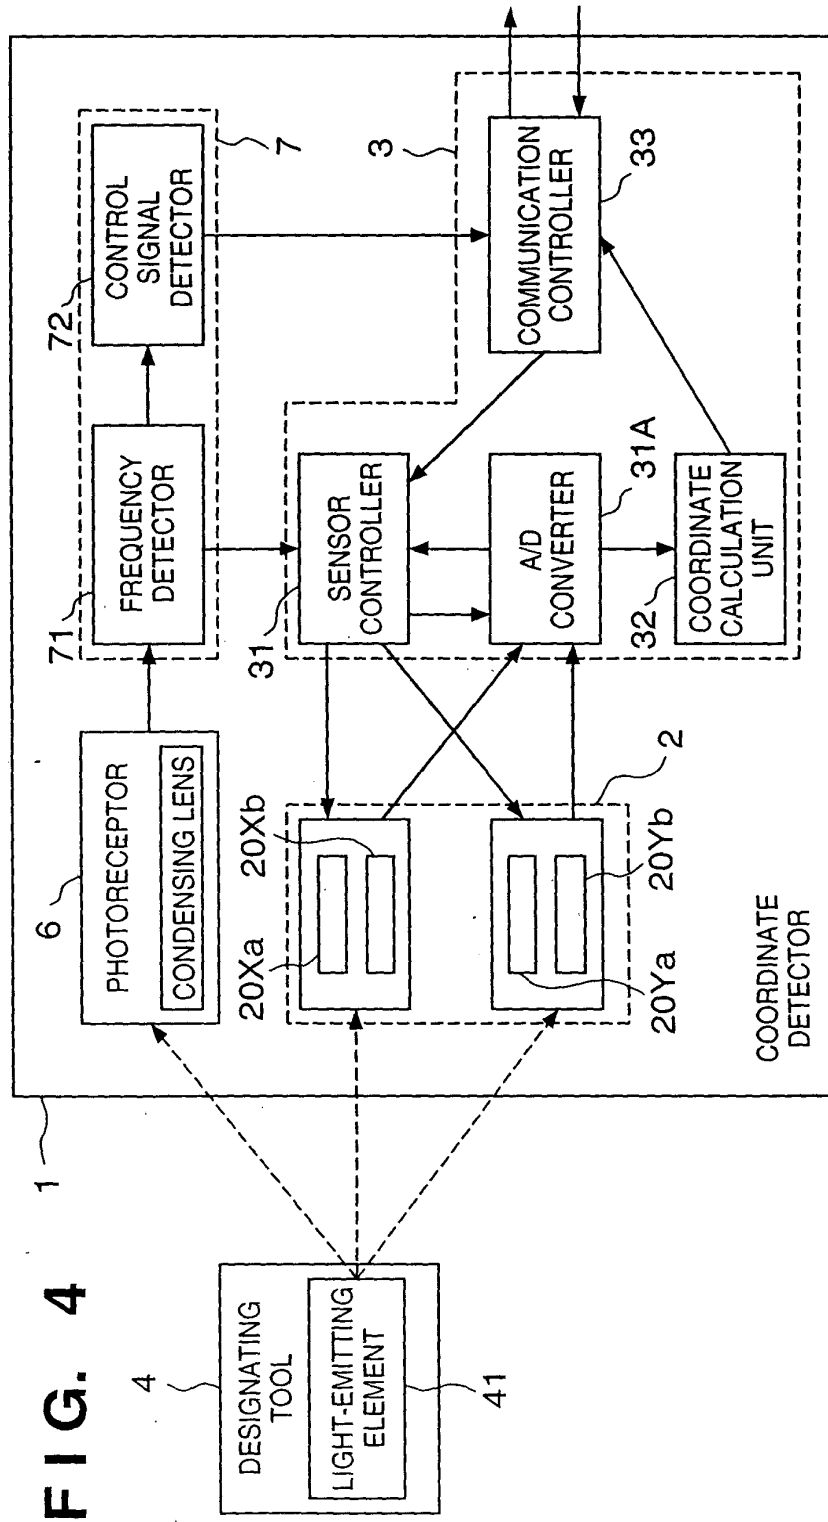

005060*54255960

5/17

FIG. 5

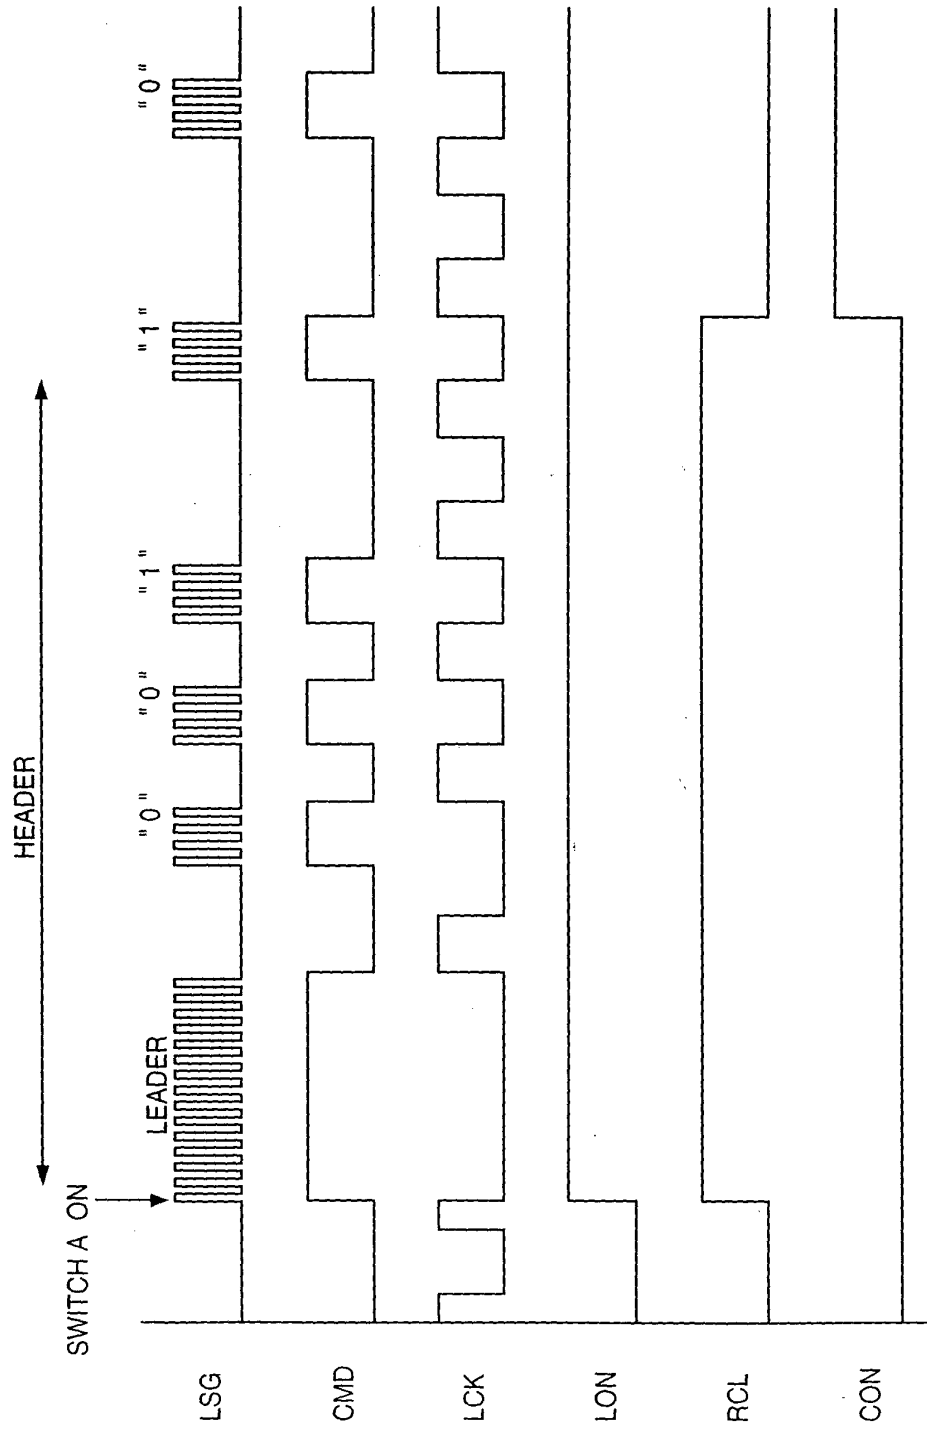

005060" 54455960

FIG. 6

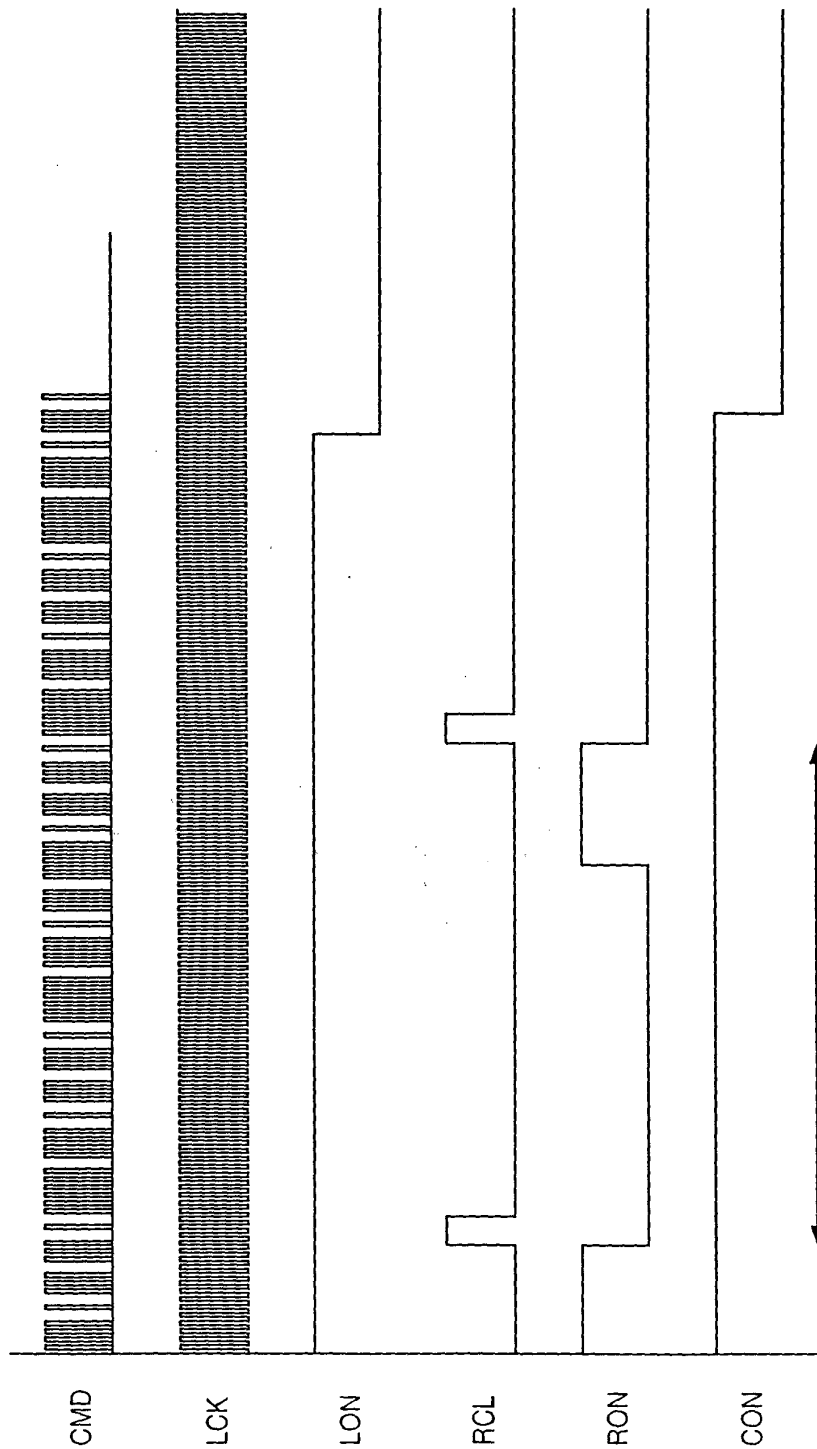


FIG. 7


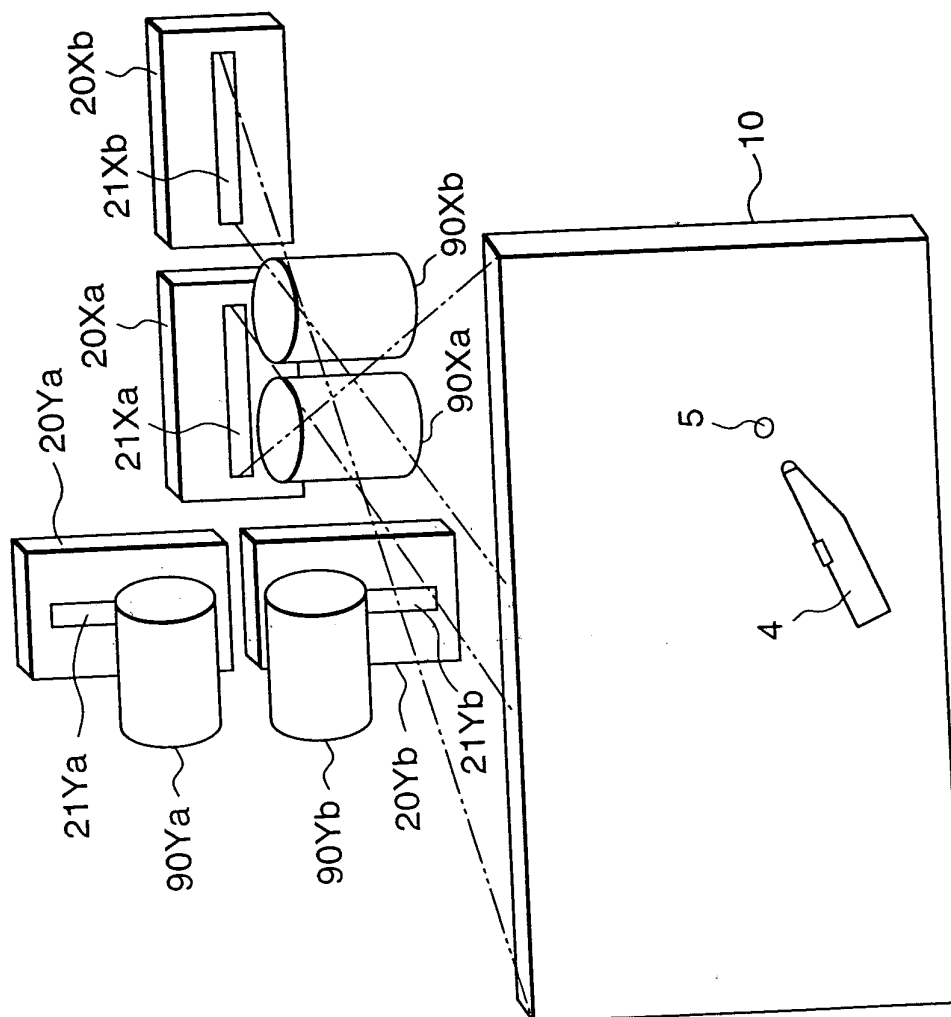



FIG. 8

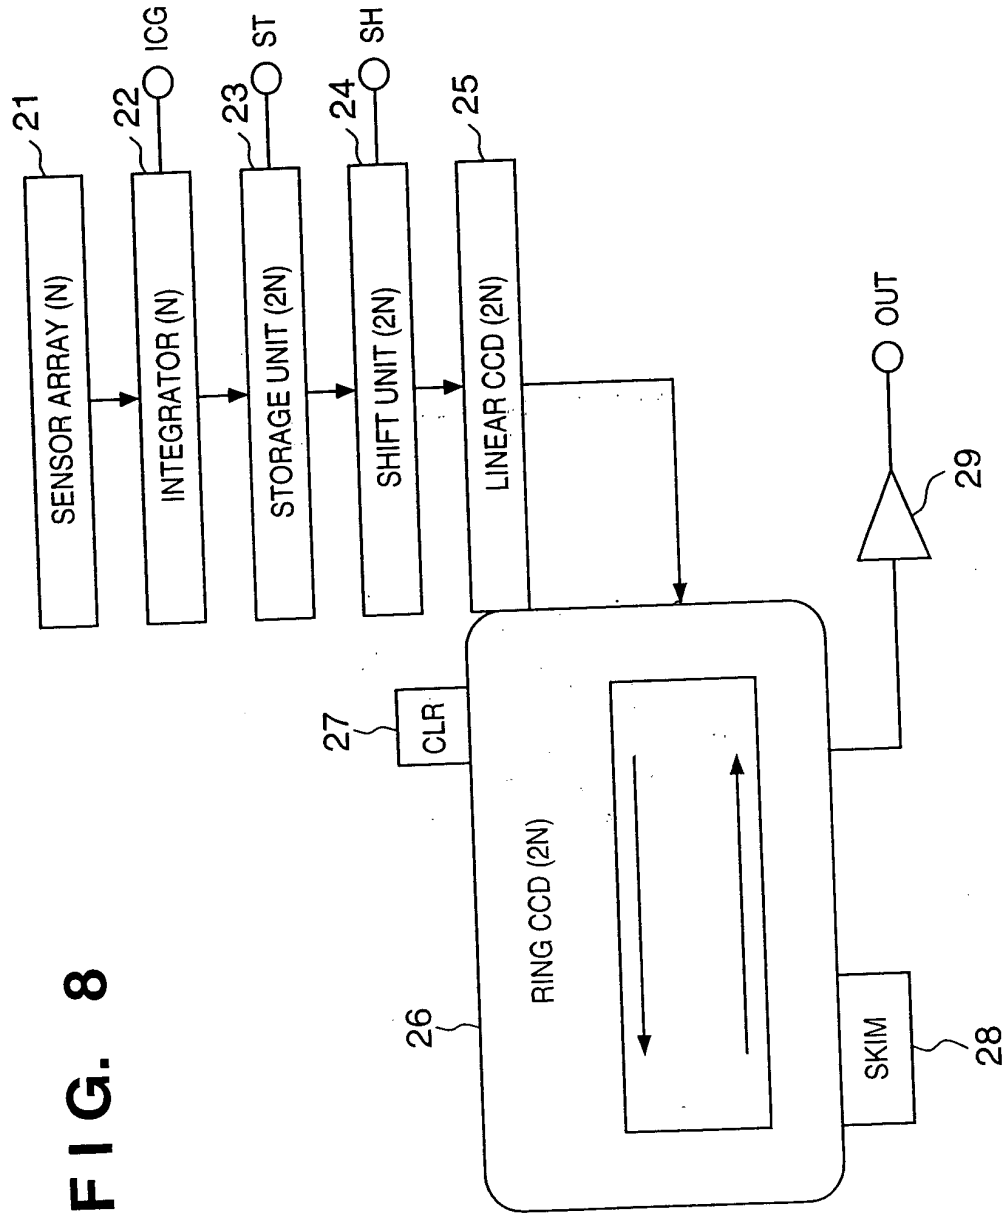

005060" 54455360

9/17

FIG. 9

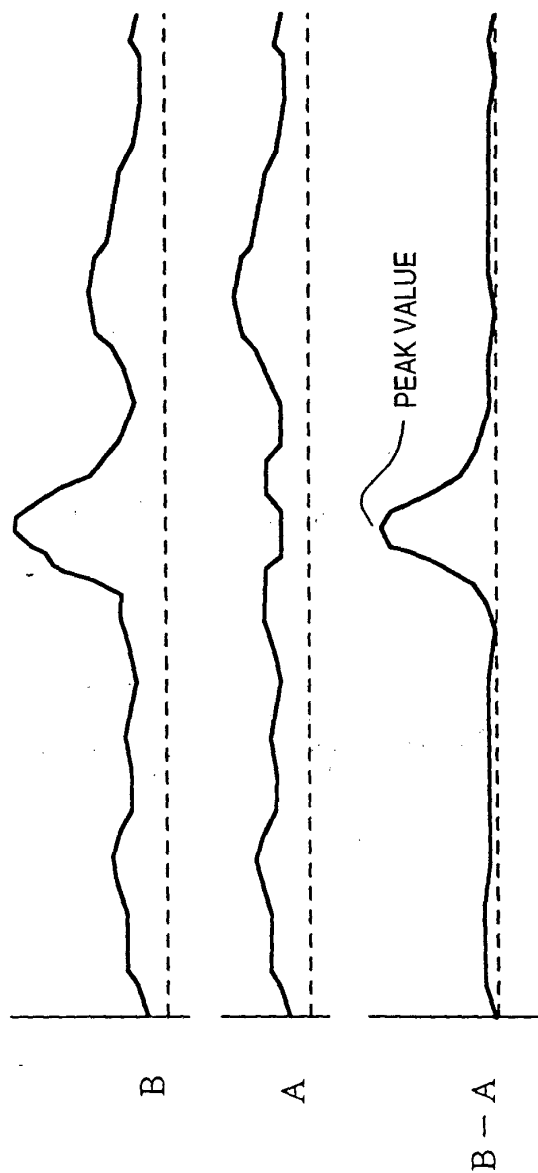

005060" 54455960

10/17

FIG. 10


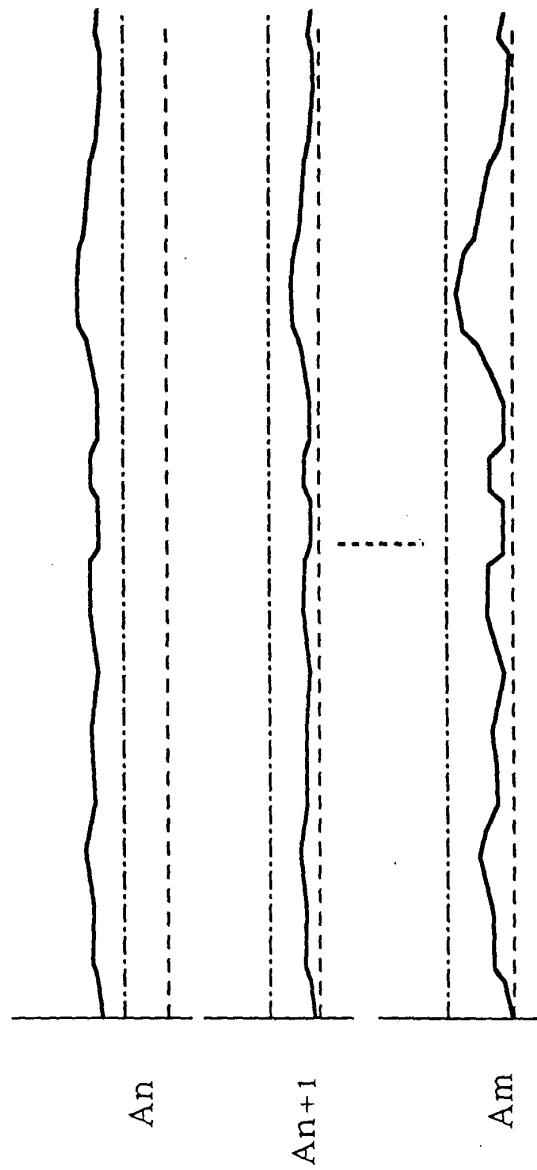


FIG. 11

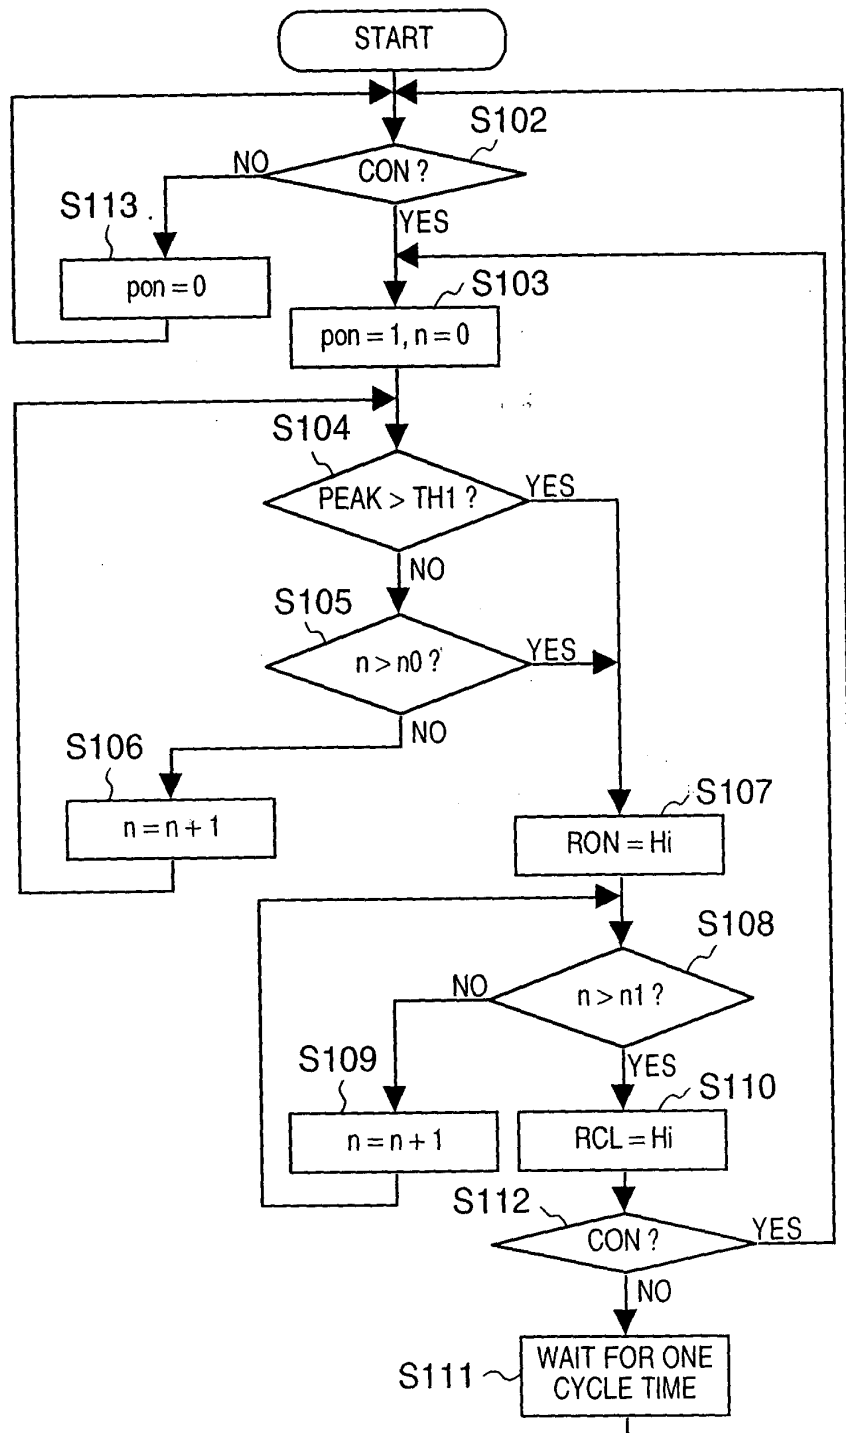

005060*52255960

005060-54255960

FIG. 12


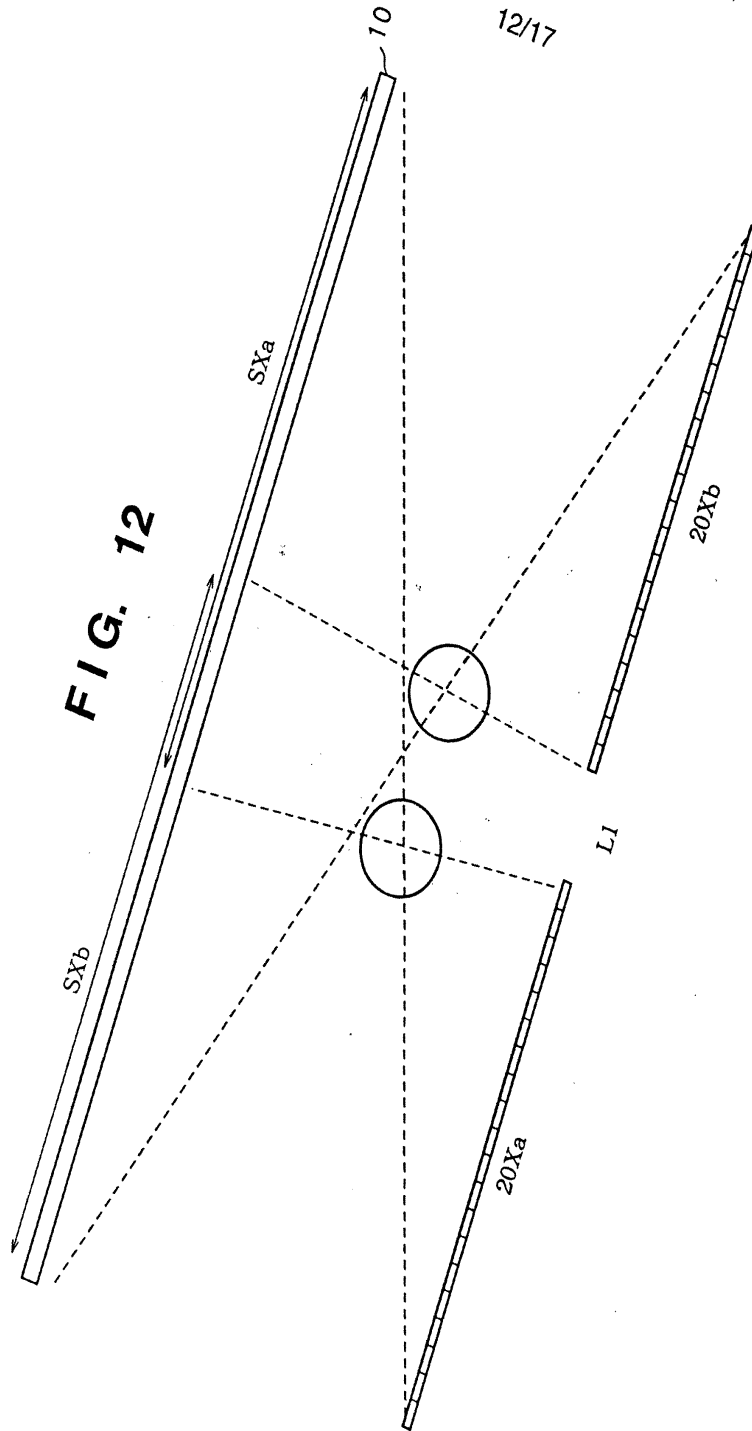


FIG. 13

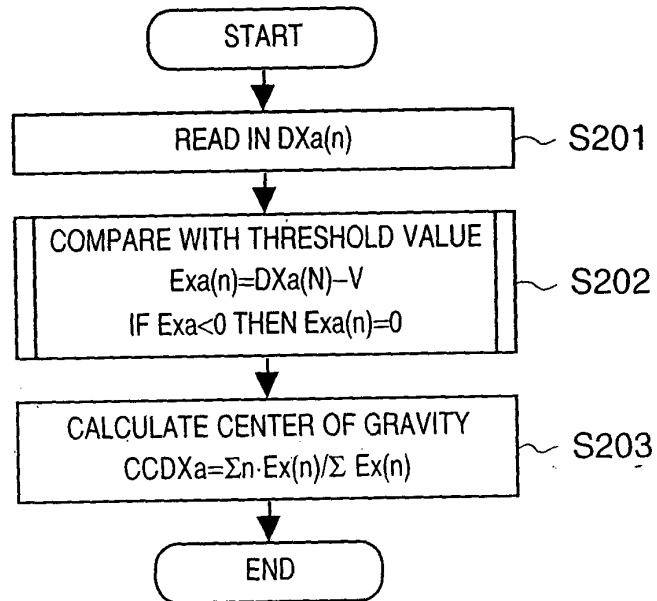

005060-5425960

005060 5/25/90

14/17

FIG. 14


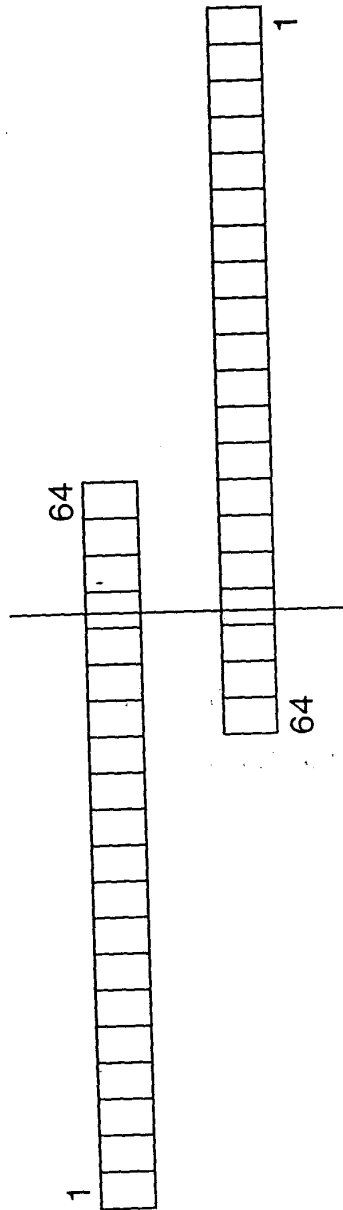


FIG. 15

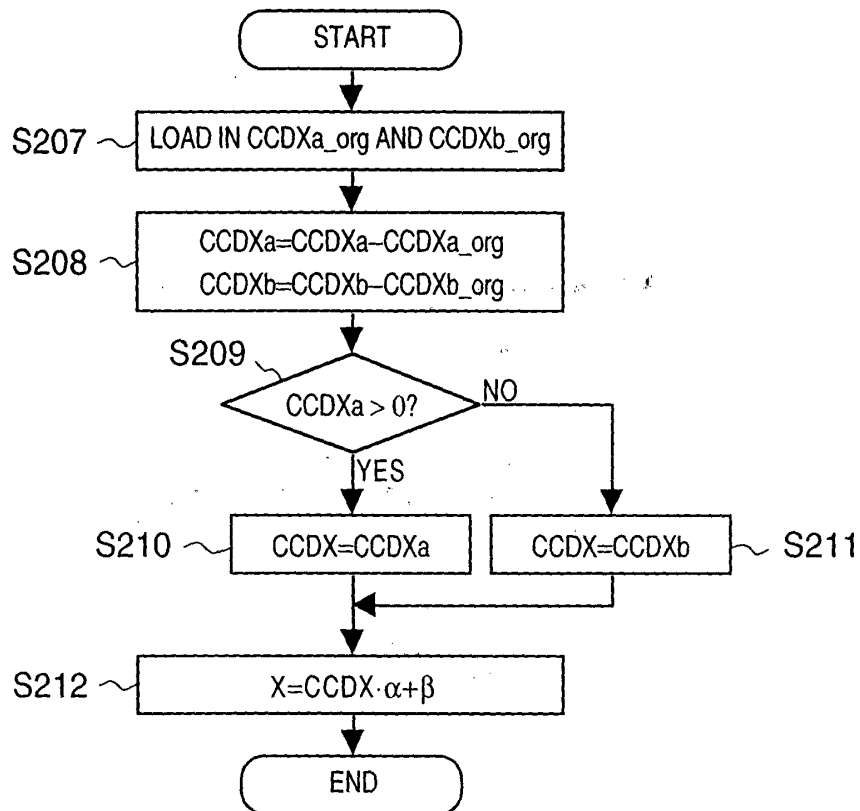

005060" 5/25960

FIG. 16


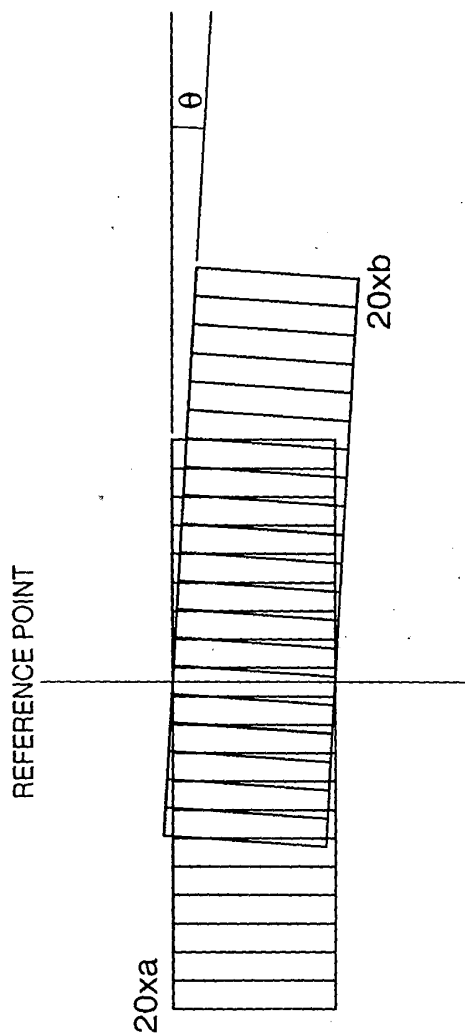


FIG. 17

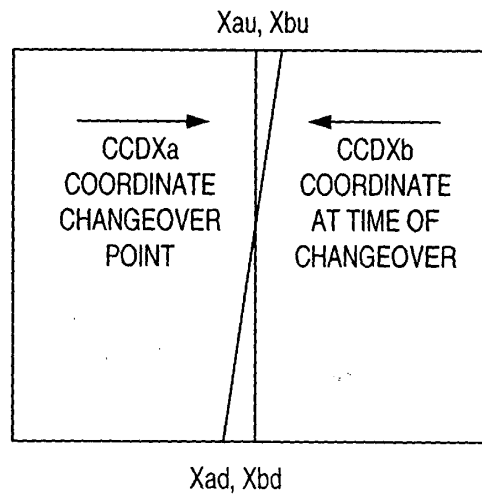

005060-54255960